

## PRODUCT SHEET & SPECIFICATIONS

# n.FORM™

# EMERGENCY PUSH BUTTON

MODEL G740



### FUNCTION

The Emergency push button is used to activate a prerecorded message or strobe in the event of an emergency or for alerting.

### FEATURES AND CAPABILITIES

- + Manual activation of messages in the event of an emergency
- + Manual activation of messages to alert or warn others
- + Polycarbonate faceplate
- + Stainless steel backplate
- + Can be reset by depressing the "Push" button, and turning clockwise a ¼ turn
- + Comes with one (NO) contact and one (NC) contact
- + Measurements: 5" H x 3¼" W x 1½" D